

# Instructions for 8903, 8904, and 8908 Spinner®






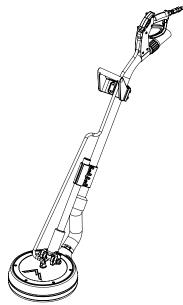

8903 - Wand Handle

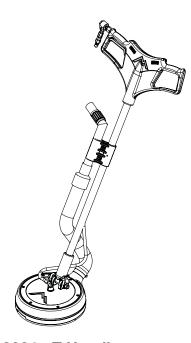

8904 - T-Handle

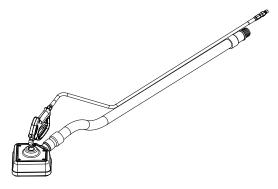

8908 - Counter Spinner®

Parish-Supply.com Syracuse, NY 315-433-9031 www.parish-supply.com



Model #	

Form # ADP-SPIN

Serial #

### GENERAL INFORMATION

#### **Dear Customer:**

Congratulations on the purchase of your new Spinner®. As you are already aware, the scene of the equipment world is becoming more high tech, and we at Mytee Products Inc. strive to keep you on the cutting edge with superior quality

Keep in mind that the Spinner® is a machine, so neglect or abuse will cause unnecessary damage and void the warranty. However with simple maintenance the Spinner® will give quality performance for many years to come.

If warranty questions arise, please consult your user manual or get in touch with your distributor. If you have questions about maintenance, replacing parts or ordering parts, please call an authorized Mytee Products Inc. Service Center. To see an updated list, visit our website at www.mytee.com

Before you begin cleaning, please read your manual thoroughly.

Sincerely

Mytee Customer Care Dept.

#### **Parts and Service**

Repairs, when required, should be performed by Mytee service personnel or Mytee authorized Service Center using Mytee original replacement parts and accessories. Call Mytee for repair parts or service. Please specify the Model and Serial Number when discussing your machine.

#### **Name Plate**

The Model and Serial Number of your machine are shown on the Nameplate on the back panel of the machine. This information is needed when ordering repair parts for the machine. Use the space provided on the front cover to note the Model and Serial Number of your machine for future reference.

#### **Unpacking the Machine**

When the machine is delivered, carefully inspect the shipping carton and the machine for damage. If damage is evident, save the shipping carton so that it can be inspected by the carrier that delivered it. Contact the carrier immediately to file a freight damage claim.

#### **Caution and Warnings**

Mytee uses the symbols below to signal potentially dangerous conditions. Always read this information carefully and take the necessary steps to protect personnel and property.



Is used to warn of immediate hazards that will cause severe personal injury or death.



Is used to call attention to a situation that could cause severe personal injury.



Is used to call attention to a situation that could cause minor personal injury or damage to the machine or other property. When using an electrical appliance, basic precautions should always be followed, including the following: Read all instructions before using this machine. This product is intended for commercial use only.



#### WARNING

To reduce the risk of fire, electrical shock, or injury:

- 1. Read all instructions before using equipment.
- 2. Use only as described in this manual. Use only manufacturer's recommended attachments.
- 3. Always unplug or disconnect the appliance from power supply when not in use.
- 4. Do not allow to be used as a toy. Close attention is necessary when used by or near children.
- 5. Do not use in areas where flammable or combustible material may be present.
- 6. Do not leave the unit exposed to harsh weather elements. Temperatures below freezing may damage components and void warranty.
- 7. Use only the appropriate handles to move and lift unit. Do not use any other parts of this machine for this purpose.
- 8. Keep hair, loose clothing, fingers, and all parts of the body away from all openings and moving parts.
- 9. Use extra care when cleaning on stairs.
- 10. When cleaning and servicing the machine, local or national regulations may apply

to the safe disposal of liquids which may contain: chemicals, grease, oil, acid, alkalines, or other dangerous liquids.

11. Do not leave operating unattended.



Use only non-flammable liquid in this machine.

#### **Preparation**

- 1. Remove furniture from cleaning area, and sweep or vacuum.
- 2. Protect cabinets, carpets, walls and painted surfaces from spray with drop cloths
- 3. Identification Identify the type of floor you are going to clean. This step is vital, since each flooring type may call for different chemicals, brushes and equipment. Basic flooring types are: resilient (vinyl, VCT, linoleum), which is generally softer; stone (terrazzo, quarry, ceramic, brick, concrete) made of natural materials; and stone substitute (marble, slate and granite), which mimics stone.
- 4. Application Once the flooring is identified, apply the appropriate type of cleaning (or in the case of resilient flooring, stripping) chemical. On tile surfaces, spray chemical evenly over tile and grout lines, allowing it to pool in the lines.
- 5. Emulsification Chemicals typically require dwell time to remove the dirt and grime driven into the surface. The dirtier the floor, the longer the chemicals may need to dwell. Without proper dwell time, chemicals will not be effective.
- 6. Agitation and Elimination Agitate the chemical into the floor to facilitate cleaning using a Spinner® floor machine connected to an extractor. The Spinner® lays down high-pressure spray to agitate and rinse, and vacuums up the solution simultaneously, eliminating it from the surface.

#### Spinner® Operation

- 1. Attach the Vacuum and Solution Hoses to the extractor.
- 2. Attach the Solution Hose to the Male Quick Disconnect and the Vacuum Hose to
- 3. Turn on the extractor to engage the vacuum, while making sure the bottom of the Spinner™ is flush with the cleaning surface to ensure proper suction
- 4. Squeeze the Spinner's™ high-pressure trigger gun to dispense solution on to the surface.
- 5. Hold the machine at waist level and use a back-and-forth motion.

#### **After Use**

- 1. Unplug.
- 2. Inspect hoses and replaced if damaged.
- 3. After each use, wipe floor machine with a clean, soft, damp cloth.
- 4. Do not expose to rain.
- 5. Store indoors. In a clean, dry place.
- 6. Do not store sitting on brush.

#### **Maintenance Schedule**

Maintenance item		Once a week
Clean and inspect hoses	х	
Check for loose hardware	х	
Clean machine with clean, soft damp cloth	х	
Inspect spray jets once a week.		х
Use Mytee® System Maintainer 3601 every 100		х
hours. Circulate through the hose and tool.		

#### **Product Specifications**

Spinner® Style	8903 1.5" Wand Style	8904 1.5" T-Handle	8908 Counter Spinner
Tube Construction	Stainle	1.5" Vacuum Hose	
Cleaning Path	1:	7.5"	
PSI Requirements	500 - 3,000 PSI		
Spray Jets	Dual 1502		
Product Weight	18 lbs.	16 lbs.	7 lbs.
Product Dimensions	12" x 14" x 52"	16" x 19" x 49"	11" x 9" x 9"

## **GENERAL INFORMATION**

#### **FAQs**

Q - How much PSI do I need to operate the Spinner®?

A - Spinners® require between 500 and 3,000 PSI.

#### **Troubleshooting**

The Spinner® is not spinning.

- 1. Inspect the jets to make sure they are not clogged.
- 2. Check the machine for a normal flow of solution by disconnecting the Solution Hose from the Spinner® and letting the liquid run freely.
- 3. If the solution's flow is disrupted, use Mytee® System Maintainer 3601.
- 4. Try to spin the unit by hand. If it does not move, replace the swivel. If it moves, the seal may need rebuilding. Take the Spinner® to your local service center.

#### Guidelines


- 1. For ease of use, keep the brush and manifold balanced and flat.
- 2. Adjust the handle at a comfortable height for the operator; making sure the brush remains balanced before starting the extractor.
- 3. The Spinner® operates differently according to the surface. Smooth surfaces offer more resistance than surfaces such as tile and grout. If you experience resistance of movement, adjust the vacuum release slot to release air from the Vacuum Hose.

### **Replacement Parts**


8903, and 8904 Brush & Glide Kit – No. A109 Glide – No. P500 Brush – No. G098 Swivel – No. H926 Rebuild Kit – No. H927

8908 Glide – No. P593 Brush – No. G111 Swivel – No. H926 Rebuild Kit – No. H927


## 8903 WAND HANDLE, 1.5" TUBE SPINNER®

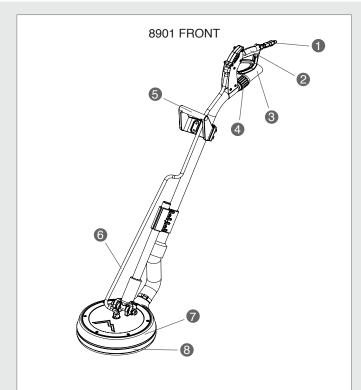


- 1. Quick disconnect
- 2. High-pressure gun
- 3. Vacuum hose connection
- 4. Vac relief
- 5. Wand grip handle
- 6. Hi-pressure solution hose
- 7. 12" Spinner® head
- 8. Nylon glide with removeable brush

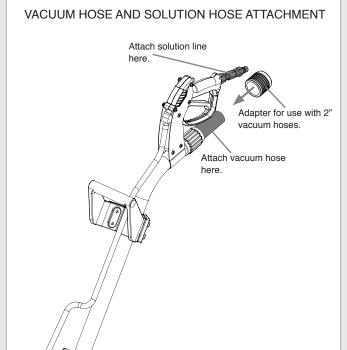



After the Vacuum Hose and Solution Hose are attached to the extractor, connect the Solution Hose to the Male Quick Disconnect, and the Vacuum Hose to wand tube. Use the included adapter if you are using a 2" vacuum hose. You can permanently attach the adapter using silicone or similar adhesive.

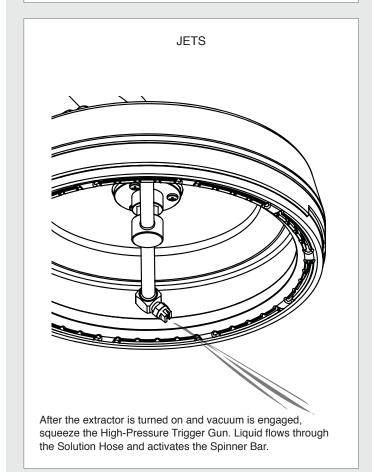

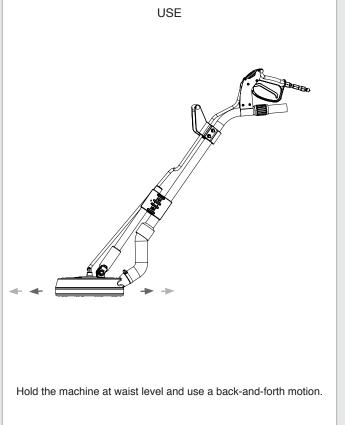


## 8903 WAND HANDLE, 1.5" TUBE SPINNER®

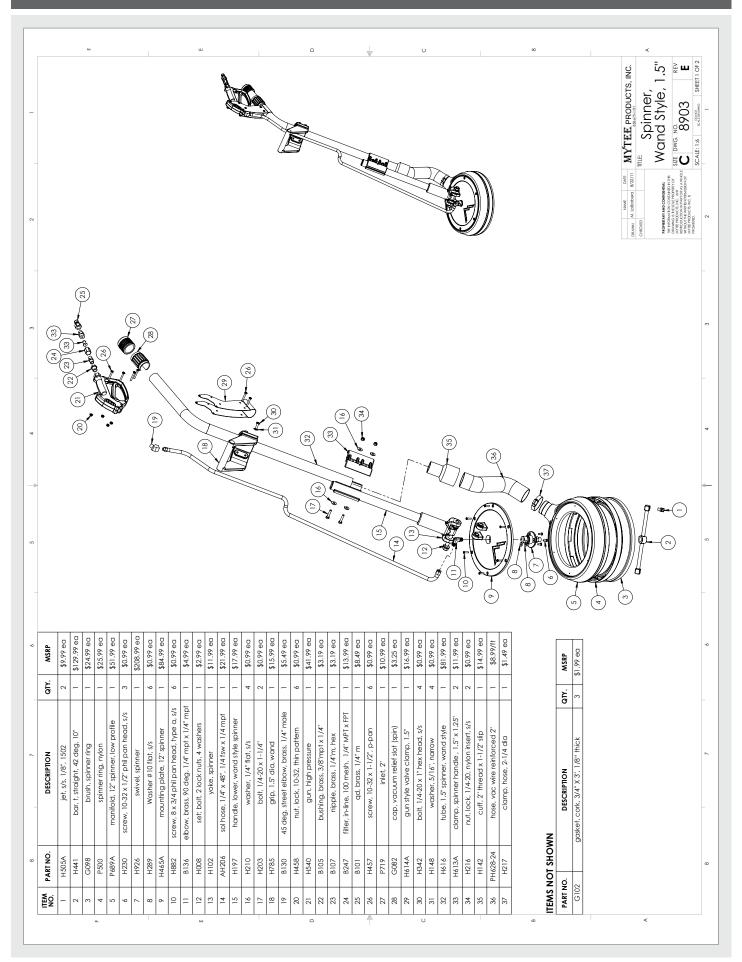


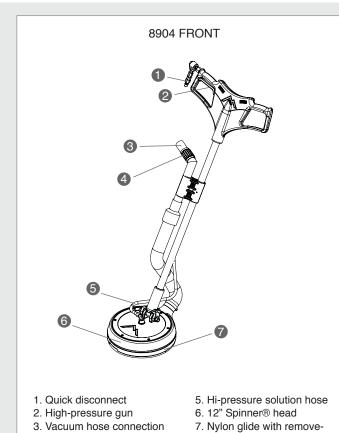

4. Vac relief

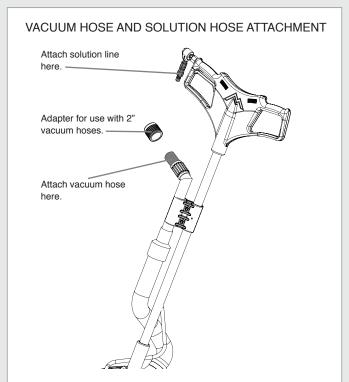



After the Vacuum Hose and Solution Hose are attached to the extractor, connect the Solution Hose to the Male Quick Disconnect, and the Vacuum Hose to wand tube. Use the included adapter if you are using a 2" vacuum hose. You can permanently attach the adapter using silicone or similar adhesive.

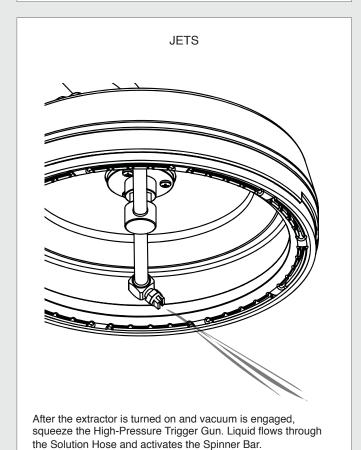


able brush



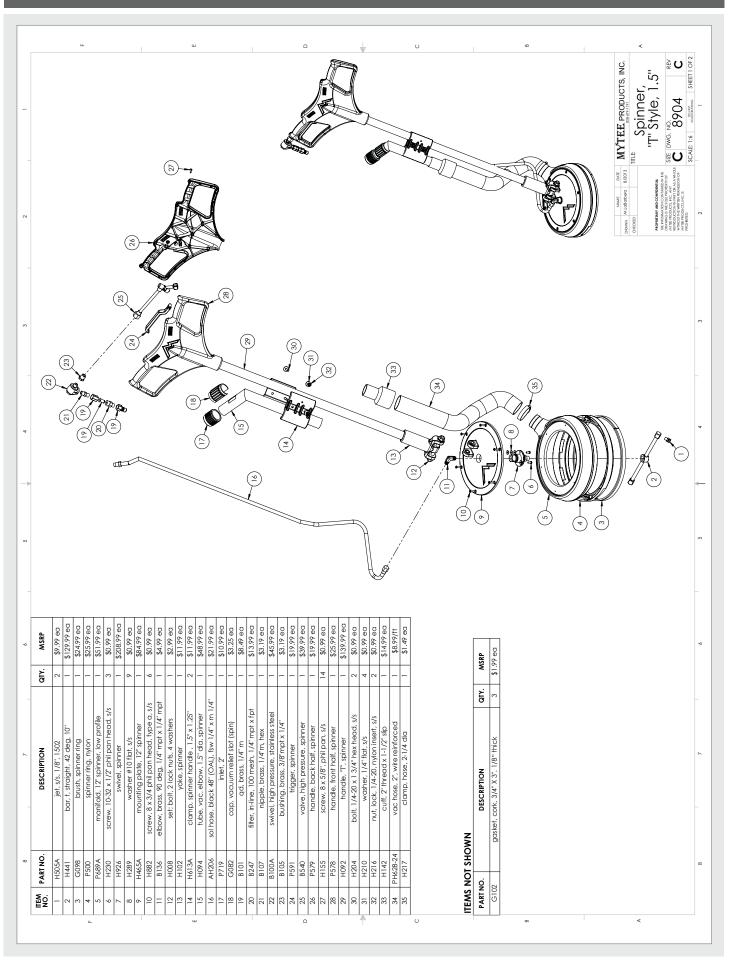

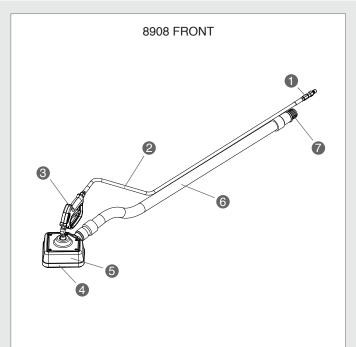


- 1. Male quick disconnect
- 2. Solution hose
- 3. High-pressure trigger gun
- 4. Nylon glide
- 5. 6" Spinner® head
- 6. Vacuum hose
- 7. Vacuum hose connection port

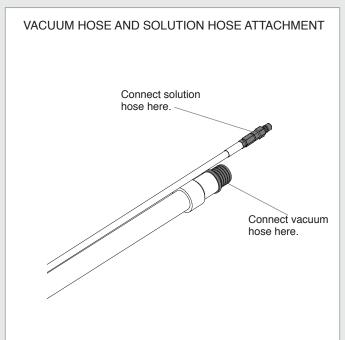

After the Vacuum Hose and Solution Hose are attached to the extractor, connect the Solution Hose to the Male Quick Disconnect, and the Vacuum Hose to wand tube.



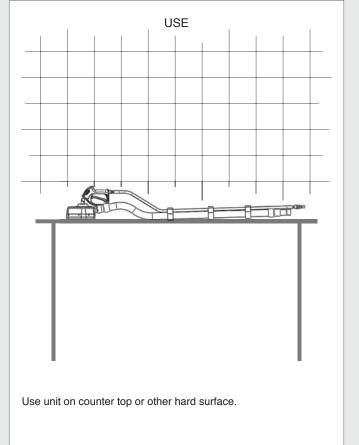

## 8908 COUNTER SPINNER®

